



Quick Start Guide

LG Stylo 5




Getting to Know Your LG Stylo™ 5



Phone Setup

Inserting the nano-SIM card and microSD™ card

- Using the sim eject pin, carefully eject the nano-SIM card and microSD tray from the bottom left-hand side of the device.
- Insert the nano-SIM card into the tray, as shown, with the gold-colored contacts facing down.
- Insert the microSD card (optional) into the microSD slot, as shown, with the gold-colored contacts facing down.
- Insert the tray in the device until the tray clicks into place.

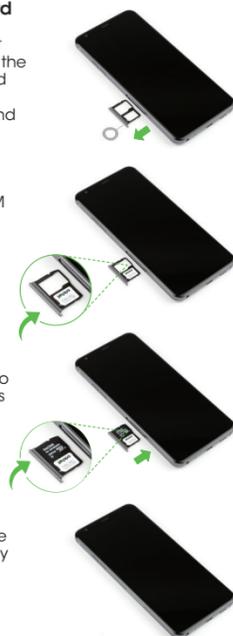

Touch Screen

Using the touch screen

- Use your fingertip to lightly touch the screen.
- Tap, drag, or slide your finger up, down, left, and right on the touch screen to perform different functions.
- To return to the **Back key** , tap the **Back key**.
- Press the **Home key**  at any time to return to the main home screen.
- Tap the **Recent apps key**  to view and access a list of apps you've recently used.



Notification panel

- Quickly view alerts such as new messages and emails, recent calls, software updates and more on the Notification panel.
- Swipe down from the top of any home screen to access the Notification panel.
 - Swipe left or right on the alert, or tap **Clear All** to remove all notifications.



Personalize

Customizing home screens

Personalize your home screen with apps, widgets, and wallpapers. Tap and hold a blank part of the home screen to access customization options, then select **Widgets**, **Wallpapers & theme**, **Home screen settings**, or **App Trash**. Browse options by swiping to scroll through, and tap or drag an item to add it to a home screen.



Organizing home screens

- To move a widget, shortcut, or folder, tap and hold it and then drag it to a new location.
- To delete, tap and hold and then drag the item to **Delete**.
- To create a folder, tap and hold an icon and drag it on top of another icon.
- To rename a folder, tap it, and tap the **Folder** name field to bring up the keyboard.




Calls and Voicemail

HD Voice Capable

Enjoy crystal-clear conversations with HD Voice*!

Make a Call

- From the home screen, tap .
- Enter a phone number with the **Dial pad**, or tap **Contacts**  to select a contact from the list.
- Tap  to place the call.

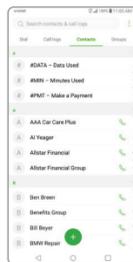

Use call waiting

With call waiting, you can take two calls at once.

- While on a call, you will hear a tone when another call comes in.
- Tap **Answer** and swipe in any direction to receive the call. Your current call will automatically be placed on hold, and both calls will be listed on screen.
- Simply tap a call in the list to make it active.



Check voicemail

- From the home screen, tap **Phone** .
- Tap **Voicemail**  icon at bottom left of screen.

*To experience Cricket HD Voice, both callers must have a compatible HD Voice capable smartphone and make the call over Cricket's LTE Network or a compatible network. Cricket's LTE coverage is not equivalent to its overall network coverage. HD Voice calls made on a compatible device and on the LTE network may not experience an HD Voice connection at times of network congestion. Other carriers' networks may interoperate with Cricket's LTE network to support an HD Voice call.

Text and Picture Messaging


Send a text message

- From the home screen, tap **Messaging** .
- Tap **Compose**  to begin a new message.
- In the **To** field, enter a number or a contact name, or tap **Contacts**  to select a contact from the address book.
- Tap the **Enter message** field, and enter your text.
- Tap **Send**.



Send a picture message

- Follow steps 1-4 above.
- Tap **Attach** .
- Tap **Image**  and select a picture or choose another file to attach.
- Tap **Send**.

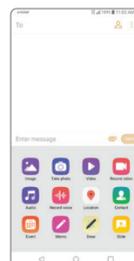

More Information

On the web

Detailed support information, including device specifications and the full user manual, is available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your phone

Accessories

Cricket offers a full line of accessories. For more information, go to www.cricketwireless.com/shop/accessories or visit your local Cricket retailer.



Product meets FCC Radio Frequency Exposure Guidelines—FCC ID ZNFQ720CS. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Copyright © 2019 LG Electronics U.S.A., Inc. ALL RIGHTS RESERVED. LG and the LG logo are registered trademarks of LG Corp. Stylo is a trademark of LG Electronics, Inc. Changes or modifications that are not expressly approved by LG Electronics U.S.A., Inc. for compliance could void the user's authority to operate this equipment. All features, functionality, and other product specifications are subject to change without notice. Screen shots are simulated and subject to change.

© 2019 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC.

Email

Email setup

- From the home screen, swipe left once, then tap **Essentials** folder. Tap **Email** .
- Select an email provider.
- Enter the email address and password and then tap **Next**.
- Once your email has synced with your phone, tap **Done**. You can now read and send emails.



Create and send an email message

- From the home screen, swipe left once, then tap **Essentials** folder. Tap **Email** .
- To compose a new message, tap **Compose** .
- Tap the **To** field and enter an email address or name, or tap **Contacts**  to select a contact from the address book.
- Enter a subject and message.
- To attach files, tap **Attach** and follow on-screen instructions.
- Tap **Send**.



Cricket Services

These services make using Cricket even better and easier!

 **My Cricket:** Access billing, make a quick payment, view usage, and access support from the palm of your hand.

 **Visual voicemail:** Quickly view, access, and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.

Additional services:

 **theSCOOP:** Get news, local weather, sports scores, entertainment and more right to your phone.

App shortcuts

Save steps using app shortcuts directly from your home screen.

- Press and hold an app to open the list of functions.
- Select the function you would like and access immediately.



Pop Menu

Capture notes on the go with the premium stylus, so you never lose a thought.

To enable Pop Menu:

- While on the home screen, remove the stylus.
- Pick from stylus-optimized apps that appear.
- Tap  to add a shortcut to any application on your phone.

Screen-Off Memo

Instantly jot down brilliant ideas while the screen is off! By default, when the device screen is off or sleeping, you can still write down your notes quickly to save for later.

- Remove the embedded Stylus Pen.
- Immediately write or draw on the display.
- Tap the Check mark to save, or tap **Share**  to share to apps.



Fingerprint ID

Securely and easily unlock your device with your fingerprint.

- Tap **Settings** , tap the **General** tab, tap **Lock Screen & security**, then tap **Fingerprints**.
- Follow the instructions to set up your fingerprint as a way to unlock your device.

Camera and Video

Take a picture

- From the home screen, tap **Camera** .
- To adjust your camera settings, such as timer, grid, or resolution, tap **Settings** .
- Zoom in and out by pinching/ spreading two fingers on the screen.
- Tap **Shutter** or press the **Volume up/down** key to take a photo.



View pictures

- From the home screen, tap **Gallery** .

Take a video

- In camera mode, tap **Camcorder**  to automatically start recording.
- Tap **Stop recording**  to end recording. You may also pause a recording and continue later by tapping **Pause** . To resume recording, tap . You can capture photos while recording by tapping .



Send a picture

- After taking a picture or video, tap the **arrow**  in the corner of the screen. A pop-up menu will appear with app thumbnails.
- Choose an app to share your picture or video via messaging, email, **Bluetooth**®, and more.

Unique LG Features

Create memos with QuickMemo®+

- From the home screen, swipe left to tap **Essentials**, then tap **QuickMemo+**.
- Tap  to create a new memo to add text or draw on an image.
- Tap **Done**  to save your memo.
- To add a time or location reminder to a memo, tap the memo and then tap **Add reminder**.



*Above image is for illustrative purposes only.

Wake up your screen with Knock On®

Extend the battery life by optimizing performance.

- From the home screen, tap **Settings** . From the Settings menu, select **General** tab. Scroll down to **KnockOn** and tap the button to enable this feature.
- While the phone is in sleep mode, tap the screen twice with your finger.
- When the screen wakes up, view notifications, access apps on your lock screen, or unlock your phone.
- From the home screen, tap twice on a blank area to put the phone back to sleep.



Phone Management

Manage your memory and battery usage with these built-in tools.

Smart Cleaning

Make the most of your memory by letting Smart cleaning clear out old and unneeded files.

- Access **Smart cleaning** inside the **Settings**  app under **General** Tab.
- Tap **Smart cleaning** .
- Tap **Optimize phone**.



Battery Saver

Extend the battery life by optimizing performance.

- Inside **Smart cleaning** app, tap **Battery saver**.
- Tap either **Extended mode** or **Maximum mode** to help extend your battery life.*



* Actual battery time may vary depending on network connectivity and application use.



